


NOSE ASSEMBLY DATA SHEET

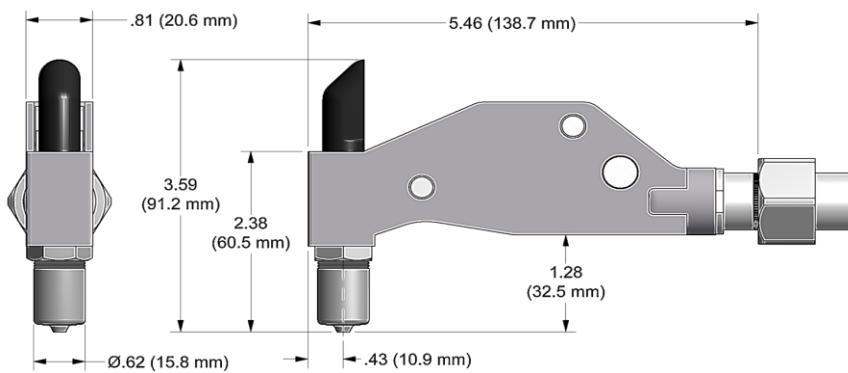

CAUTION!

Do not operate if pintail deflector is removed. Pintail may eject forcibly. SEVERE PERSONAL INJURY MAY RESULT.

*GB752 USE 752142 STROKE LIMITER.
 **GB722 USE 722142 STROKE LIMITER.
 ***GB745 USE 745158 STROKE LIMITER & 745751 ADAPTER.
 ****GB756 USE 756155 STROKE LIMITER & 745751 ADAPTER.
 *****MOST FASTENERS REQUIRE MORE THAN ONE PULL.



6/17 REV 10/25


GAGE BILT

MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
 Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
 solutions1@gagebilt.com / www.gagebilt.com

Type:	Fasteners:	Recommended Tool:
Single Action 5/32" Ø	MS90353S & U / MS90354S & U MS21140S & U / MS21141S & U MAXIBOLT®, BACB30YY, YU, & YT CR7000 SERIES BLIND BOLT (SINGLE ACTION) WITH OR W/O DRIVE WASHER	*GB751
		Alternate Tools: **GB722, ***GB745, GB752 & ****GB756

Ref. No.	Qty.	Description	SB05-751C-54RA
1	1	Nose Tip	15597
2	1	Anvil Holder	10115
3	2	Jam Nut	70411
4	1	Collet	20327
5	1	Super Grip Jaw Assy	30550-S1
6	1	Frame	75310
7	2	Shoe Bearing	75311
8	1	Drawbolt Collet	70486
9	1	Barbed Retainer	70575
10	1	Deflector	61107
11	1	Lever	75313
12	1	Button Head Cap Screw	402471
13	2	Set Screw	75315
14	1	Guard	75316
15	2	Pivot Pin	75317
16	8	Link	75318
17	4	Link Pin	75319
18	1	Bellcrank	75320
19	1	Guide Pin	75321
20	1	Drawbolt	75322
21	1	Adapter Assy	70459
22	1	Extension-Collet	70463

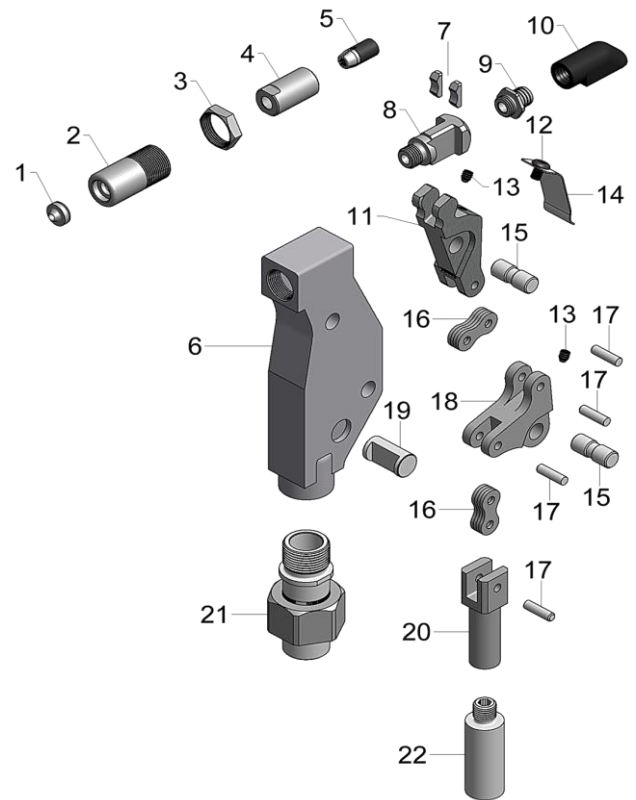

ATTACHMENT:

Disconnect air supply from tool. Hold back of drawbolt-collet (8) down with thumb. Thread anvil holder (2) into frame (6) until it bottoms out on collet (4). Loosen approximately 1/4 turn and tighten jam nut (3) securely to frame (6). Engage one or two threads of extension-collet (22) onto piston assy located on tool, then insert adapter assy (21) into end of head cylinder assy located on tool and turn clockwise until snug. Rotate nose assembly to desired position and tighten adapter assy (21) securely. Reconnect air supply to tool.

DISASSEMBLY:

Loosen jam nut (3) and remove holder (2). Unscrew collet (4) which contains super grip jaw assy (5) from drawbolt-collet (8).

Remove button head cap screw (12) and guard (14). Remove two set screws (13) and push out two pivot pins (15) to permit removal of linkage. Shoe bearings (7) and drawbolt-collet (8) will disengage from lever (11).

Remove four link pins (17) to disassemble lever (11), links (16), bellcrank (18) and drawbolt (20).

Remove guide pin (19) from frame (6). Adapter Assy (21) is secured to frame with Loctite® and need not be removed unless damaged.

REASSEMBLY:

Reverse the procedure. Linkage, consisting of lever (11), links (16), bellcrank (18) and drawbolt (20) should be assembled as a subassembly before inserting lever (11) into shoe bearings (7) and drawbolt-collet (8). MAKE SURE NOTCHES ON DRAWBOLT-COLLET (8) ARE POINTING TOWARDS LEVER (11). This complete subassembly may then be inserted into frame (6) and retained by guide pin (19) and pivot pins (15).