


NOSE ASSEMBLY DATA SHEET

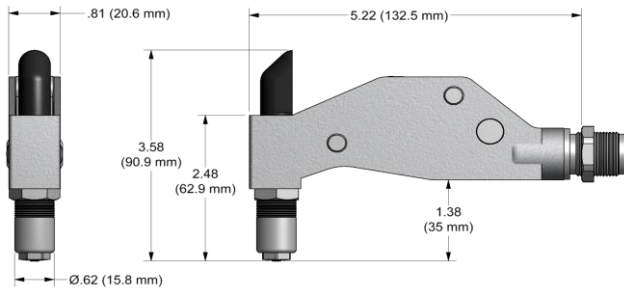

CAUTION!

Do not operate if pintail deflector is removed. Pintail may eject forcibly. SEVERE PERSONAL INJURY MAY RESULT.

*RECOMMENDED FOR MAINTENANCE APPLICATIONS ONLY.


**RIGHT ANGLE NOSE ASSEMBLIES REQUIRE MORE THAN ONE "PULL".



1/03 REV 2/26

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

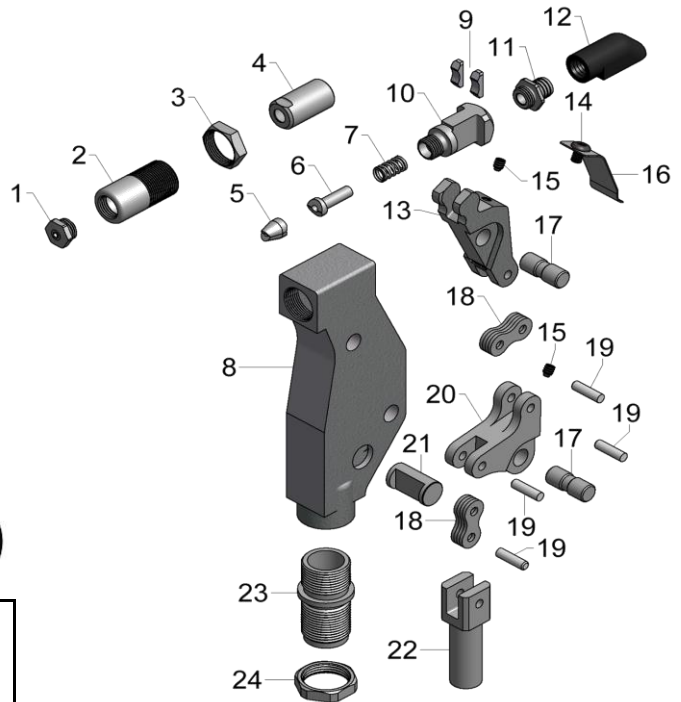

ATTACHMENT:

Disconnect air supply from tool. Hold back of drawbolt-collet (10) down with thumb. Thread anvil holder (2) into frame (8) until it bottoms out on collet (4). Loosen approximately 1/4 turn and tighten jam nut (3) securely to frame (8). Engage one or two threads of drawbolt (22) onto piston assy located on tool, then insert adapter fitting (23) into end of head cylinder assy located on tool and turn clockwise until snug. Tighten adapter fitting (23) securely then rotate nose assembly to desired position and tighten jam nut (24) to face of tool securely. Reconnect air supply to tool.

DISASSEMBLY:

Loosen jam nut (3) and remove anvil holder (2). Unscrew collet (4) which contains jaw assy (5) from drawbolt-collet (10).

Remove button head cap screw (14) and guard (16). Remove two set screws (15) and push out two pivot pins (17) to permit removal of linkage. Shoe bearings (9) and drawbolt-collet (10) will disengage from lever (13).

Remove four link pins (19) to disassemble lever (13), links (18), bellcrank (20) and drawbolt (22).

Remove guide pin (21) from frame (8). Adapter Fitting (23) is secured to frame (8) with Loctite® and need not be removed unless damaged.

REASSEMBLY:

Reverse the procedure. Linkage, consisting of lever (13), links (18), bellcrank (20) and drawbolt (22) should be assembled as a subassembly before inserting lever (13) into shoe bearings (9) and drawbolt-collet (20). MAKE SURE NOTCHES ON DRAWBOLT-COLLET (10) ARE POINTING TOWARDS LEVER (13). This complete subassembly may then be inserted into frame (8) and retained by guide pin (21) and pivot pins (17).

Type:		Fasteners:	Recommended Tool:
Self-Releasing 3/16"		STANDARD MBC® NAS1719, NAS1720 & NAS1721	GB704
Ref. No.	Qty.	Description	MBC06-704-54RA
1	1	Nose Tip	10253
2	1	Anvil Holder	10125
3	1	Jam Nut	70411
4	1	Collet	20513
5	1	Jaw Set	30513
6	1	Follower	40506-1
7	1	Spring	50427
8	1	Frame	75310
9	2	Shoe Bearing	75311
10	1	Drawbolt-Collet	70486-1
11	1	Barbed Retainer	70575
12	1	Deflector	61107
13	1	Lever	75313
14	1	Button Head Cap Screw	402471
15	2	Set Screw	75315
16	1	Guard	75316
17	2	Pivot Pin	75317
18	8	Link	75318
19	4	Link Pin	75319
20	1	Bellcrank	75320
21	1	Guide Pin	75321
22	1	Drawbolt	75322
23	1	Adapter Fitting	75323
24	1	Jam Nut	70104