


NOSE ASSEMBLY DATA SHEET

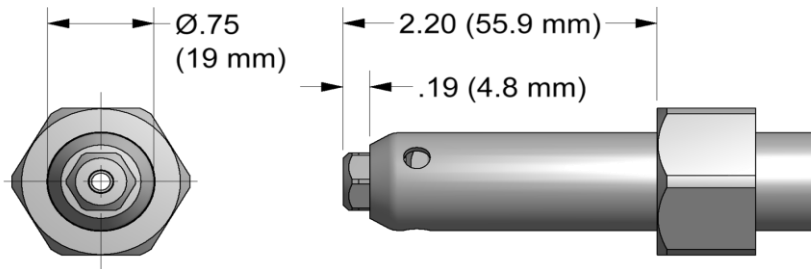

ASSEMBLY:

Notes:


A. Apply Vibra-tite® p/n/ 405125 to all threads and allow it to set 20 minutes prior to assembly.

B. If nose assy is assembled as it is when purchased new, follow steps 4-6 to attach to tool.

1. Place cap (7) on a flat work surface. Note direction from exploded view.
2. Place spring (6) on top of cap (7). Insert follower (5) thru spring (6) and into cap (7). Place jaw set (4) on top of follower (5).
3. Slide collet (3) over assembled parts and carefully slide off of work bench with finger holding cap (7) and assembled parts from falling out of the bottom of collet (3).
4. Flip collet and parts 180° and hold with hand. Thread assembled collet (3) onto piston assy on tool holding tool in other hand. Snug with 9/16" wrench on collet (3) and hex key into rear of piston of tool.
5. Slide anvil holder assy (2) over assembled collet (3).
6. Slide retaining nut from tool (retaining nut stop not used in this nose assembly) over anvil holder assy (2) and tighten.

DISASSEMBLY:

Reverse assembly instructions.

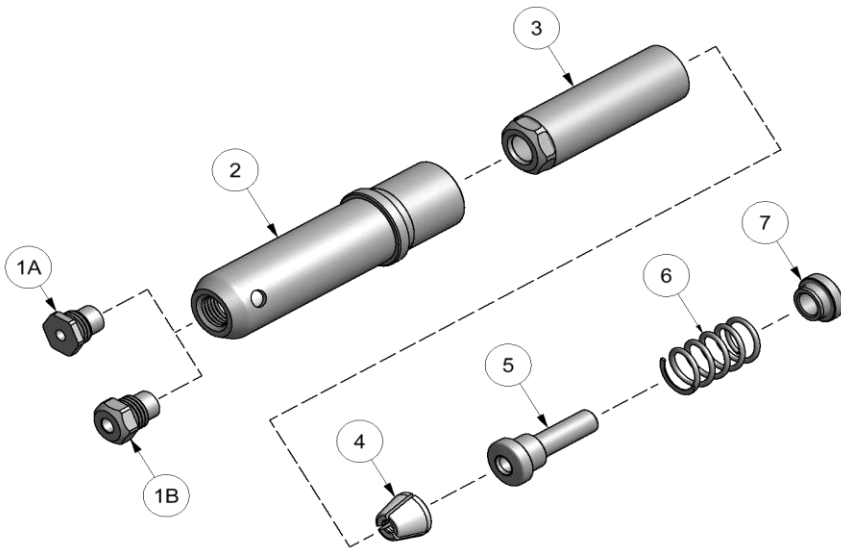

3/06 Rev. 8/25



GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fastener:		Recommended Tool:	
Self-Releasing		Magna-Lok®, Magna-Bulb® & Hemlok® Counter Sunk and Protruding Head Serrated Stem Structural Rivets		GB722	
				Alternate Tools: GB713 & GB2480(A)	
Ref. No.	Qty.	Description		MGLC68-752A-21	
1A	1	Nose Tip (3/16")		10248-4	
1B	1	Nose Tip (1/4")		10211-1	
2	1	Anvil Holder Assembly		10942-7	
3	1	Collet		20845	
4	1	Jaw Set		36801	
5	1	Follower		40811	
6	1	Spring		50421	
7	1	Cap		40810	
8	1	Extension-Collet		70823	

VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION. MAGNA-LOK® & MAGNA-BULB® ARE A REGISTERED TRADEMARKS OF HOWMET AEROSPACE. HEMLOK® IS A REGISTERED TRADEMARK OF AVDEL UK LIMITED.