



NOSE ASSEMBLY DATA SHEET

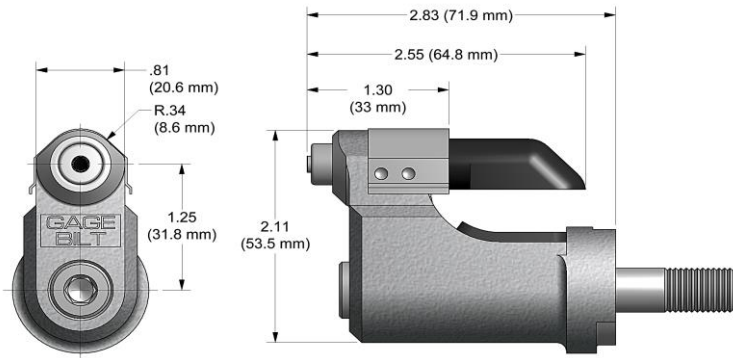

CAUTION:
Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY. Cap (9) use for closed access applications only or when clearance is an issue!

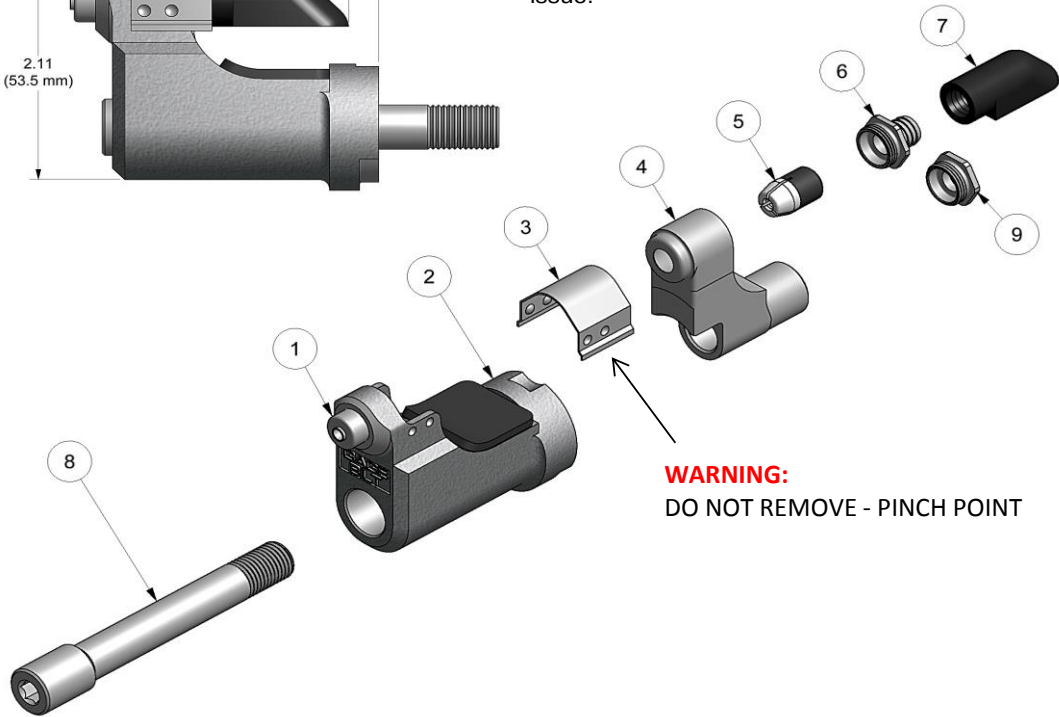

WARNING:
DO NOT REMOVE - PINCH POINT

ASSEMBLY INSTRUCTIONS:

Disconnect tool from power source. On front of GB206-375(A) Installation tool, remove screw and stop. With collet placed in anvil install on tool. Apply Vibra-TITE® part no. 405124 to threads on drawbar. Slide drawbar thru anvil and collet. Using a 1/4" hex wrench, screw drawbar into piston until tight. Replace screw and stop on tool.

*Use Adapter No. 751206.

**Use Adapter No. 353206.

4/15

GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500
Clinton Twp., MI 48038 (586) 226-1505 Fax
e-mail:solutions@gagebilt.com / www.gagebilt.com

Type:		Fasteners:		Recommended Tool:	
Non Self-Releasing 13/64", 17/64" & 21/64" Ø		2 ASP®, ASP PF, ASP FF ASP F & ASP LC		GB206-375(A)	
				Alternate Tools: *GB752, **GB745 & *GB722	
Ref. No.	Qty.	Description	*ASP06-206H-27OS	*ASP08-206H-27OS	ASP10-206H-27OS
1	1	Cap Assembly	10142	10143	10174
2	1	Anvil and Holder Assy (Inc. #1)	19988	19989	19980
3	1	Guard	60426	60426	60426
4	1	Collet	20722	20722	20722
5	1	Super-Grip Jaw Assy	30656-S10	30864-S15	30863-S4
6	1	Barbed Retainer	70569	70569	70569
7	1	Deflector	61107	61107	61107
8	1	Drawbar	71141	71141	71141
9	1	Cap	70571	70571	70571