



NOSE ASSEMBLY DATA SHEET

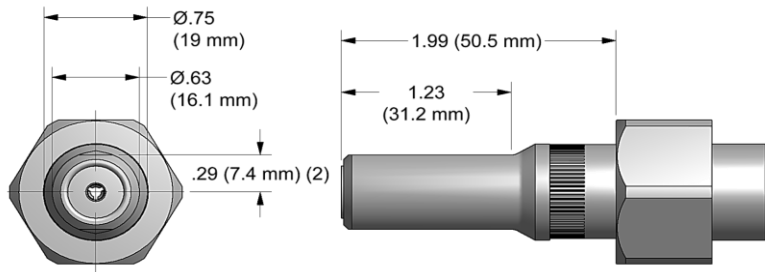

SLOTS ON RETAINING NUT STOP, SUPPLIED WITH TOOL, FIT OVER EARS ON ANVIL ASSY

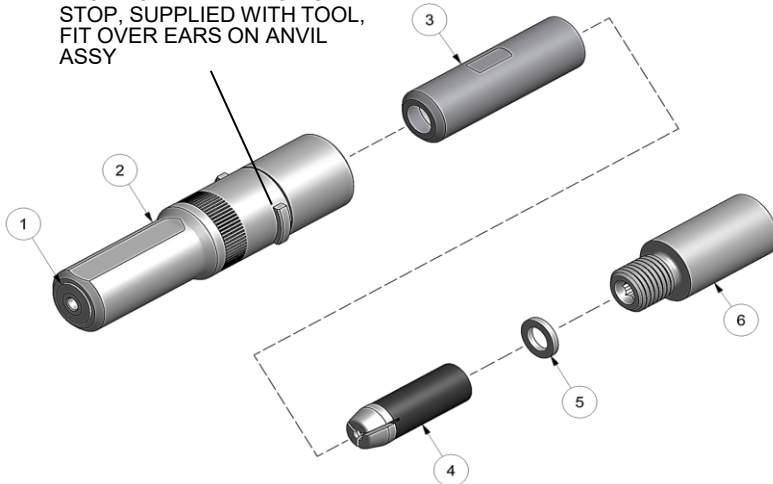

ASSEMBLY:

Notes:

- Apply Vibra-tite® p/n/ 405125 to all threads and allow it to set 20 minutes prior to assembly.
 - Tighten collet (3) and extension-collet (6) to 80-100 IN-LBS. (.36 - .44 Kn) torque.
 - If nose assy is assembled as it is when purchased new, follow steps 3-5 to attach to tool.
- Insert super grip jaw assy (4) into rear of collet (3). Place spacer (5) on rear of super grip jaw assy (4) (Note direction in exploded view).
 - Thread collet (3) to extension-collet (6) using hex key in front of collet-extension (6) and flats provided on collet (3).
 - Thread assembled collet (3) and extension-collet (6) onto piston of tool using flats provided and hex in rear of piston.
 - Slide anvil & holder assy (2) over collet (3).
 - Slide retaining nut stop and retaining nut over ears on anvil (see exploded view) and tighten to tool.

DISASSEMBLY:

Reverse assembly instructions.



11/23 REV 10/25

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fasteners:	Recommended Tool: GB751
Non Self-Releasing 5/32"Ø		MS90353S & U / MS90354S & U MS21140S & U / MS21141S & U MAXI-BOLT®, BACB30YY, YU, & YT, CR7000 SERIES BLIND BOLT (SINGLE ACTION) WITH DRIVE WASHER	Alternate Tools: GB722 & GB2480(A)
Ref. No.	Qty.	Description	UBB05-752C-20F
1	1	Anvil-Driver	15598
2	1	Anvil & Holder Assembly	12312
3	1	Collet	20727
4	1	Super-Grip Jaw Assembly	30544-S
5	1	Spacer	70572
6	1	Extension-Collet	70550

MAXI-BOLT® IS A REGISTERED TRADEMARK OF CHERRY AEROSPACE FASTENERS. VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION.