



NOSE ASSEMBLY DATA SHEET

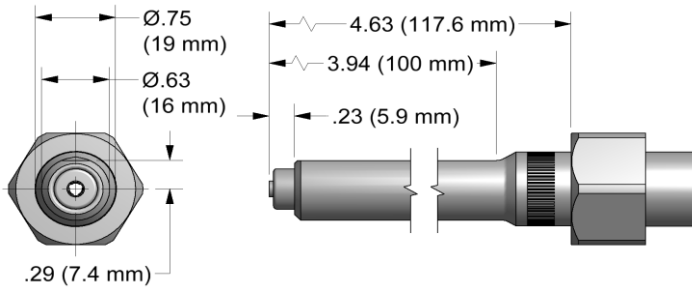

NOTE!
Use with driver:
ASP-06 for 13/64 dia.

SLOTS ON RETAINING NUT
STOP, SUPPLIED WITH
TOOL, FIT OVER EARS ON
ANVIL ASSY

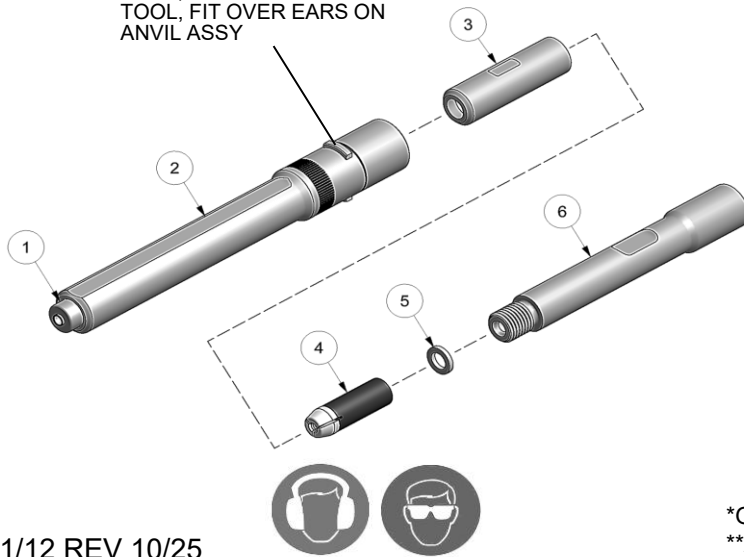

1/12 REV 10/25

ASSEMBLY:

Notes:

- Apply Vibra-tite® p/n/ 405125 to all threads and allow it to set 20 minutes prior to assembly.
 - Tighten collet (3) and extension-collet (6) to 80 - 100 IN-LBS. (.36 - .44 Kn) torque.
 - If nose assy is assembled as it is when purchased new, follow steps 3 - 5 to attach to tool.
- Drop super grip jaw assy (4) and spacer (5) into collet (3).
 - Thread collet (3) to extension-collet (6). Snug tighten assembled parts using 1/2" wrench on collet (3) and 7/16" wrench on extension-collet (6).
 - Thread assembled collet (3) and extension-collet (6) to piston on tool. Snug tighten assembled parts using 7/16" wrench on extension-collet (6) and hex key in rear of piston on tool.
 - Slide anvil assy (2) over assembled collet (3) and extension-collet (6).
 - Slide Retaining nut and retaining nut stop (see exploded view) on anvil assy (2) and tighten.

DISASSEMBLY:

Reverse assembly instructions.

*GB752 FOR 17/64Ø MAX.

**Anvil & holder assembly includes 35208 retainer

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fastener:	Recommended Tool:
Non Self-Releasing 13/64" Ø		ASP® ASP 2, ASP PF, ASP 2 F, ASP 2 LC, ASP 4 FF, ASP FF, ASP F, ASP-LC and MAF	GB751
			Alternate Tools: GB713, *GB752 & GB2480(A)
Ref. No.	Qty.	Description	ASP06-752C-45
1	1	Cap assy	10142
2	1	Anvil & Holder Assembly (Incl. #1)	17771
3	1	Collet	20727
4	1	Super-Grip Jaw Assembly	30656-CS
5	1	Spacer	70572
6	1	Extension-Collet	70551

ASP® IS A REGISTERED TRADEMARK OF HOWMET AEROSPACE. VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION.