



NOSE ASSEMBLY DATA SHEET

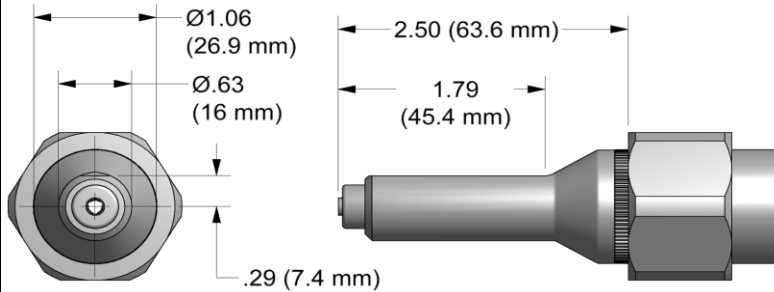

NOTE!

Use with driver:
ASP-06 for 13/64 dia.

SLOTS ON RETAINING NUT
STOP, SUPPLIED WITH
TOOL, FIT OVER EARS ON
ANVIL ASSY

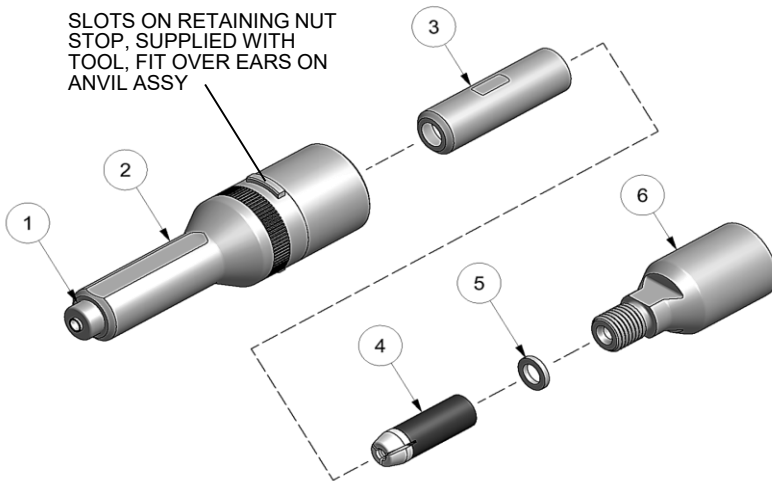

1/12 REV 10/25

ASSEMBLY:

Notes:

- Apply Vibra-tite® p/n/ 405125 to all threads and allow it to set 20 minutes prior to assembly.
 - Tighten collet (3) and extension-collet (6) to 80 - 100 IN-LBS. (.36 - .44 Kn) torque.
 - If nose assy is assembled as it is when purchased new, follow steps 3 - 5 to attach to tool.
- Insert super grip jaw assy (4) into rear of collet (3). Place spacer (5) on rear of super grip jaw assy (4).
 - Thread collet (3) to extension-collet (6) using flats provided. Snug tighten assembled parts using 1/2" wrench on collet (3) and 7/16" on extension-collet (6).
 - Thread assembled collet (3) and extension-collet (6) onto piston of tool using flats provided and hex in rear of piston.
 - Slide anvil & holder assy (2) over collet (3).
 - Slide retaining nut stop and retaining nut over ears on anvil (see exploded view) and tighten to tool.

DISASSEMBLY:

Reverse assembly instructions.

*Anvil Assembly includes 35308 retainer.

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fastener:	Recommended Tool:
Non Self-Releasing 13/64" Ø		ASP® ASP 2, ASP PF, ASP 2 F, ASP 2 LC, ASP 4 FF, ASP FF, ASP F, ASP-LC and MAF	GB745
			Alternate Tools: GB756 & GB2581(A)
Ref. No.	Qty.	Description	ASP06-745C-23
1	1	Cap Assy	10142
2	1	Anvil & Holder Assembly. (Inc.#1)	11178
3	1	Collet	20727
4	1	Super-Grip Jaw Assembly	30656-CS
5	1	Spacer	70572
6	1	Extension-Collet	70552

ASP® IS A REGISTERED TRADEMARK OF HOWMET AEROSPACE. VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION.