


NOSE ASSEMBLY DATA SHEET

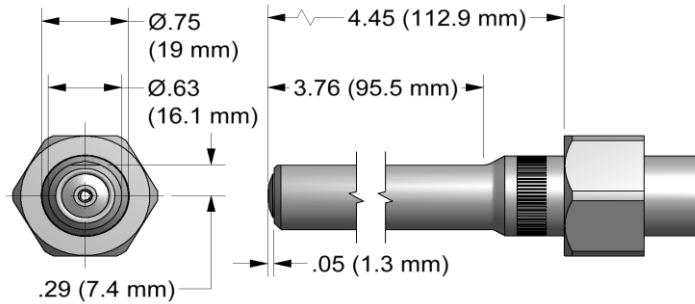


ASSEMBLY:

Notes:

- Apply Vibra-tite® p/n/ 405125 to all threads and allow it to set 20 minutes prior to assembly.
- Tighten collet (3) and extension-collet (6) to 80 - 100 IN-LBS. (.36 - .44 Kn) torque.
- If nose assy is assembled as it is when purchased new, follow steps 3 - 5 to attach to tool.
 - Insert super grip jaw assy (4) into rear of collet (3). Place spacer (5) on rear of super grip jaw assy (4).
 - Thread collet (3) to extension-collet (6) using flats provided.
 - Thread assembled collet (3) and extension-collet (6) onto piston of tool using flats provided and hex in rear of piston.
 - Slide anvil assembly (2) over collet (3).
 - Slide retaining nut stop and retaining nut over ears on anvil (see exploded view) and tighten to tool.

DISASSEMBLY:

Reverse assembly instructions.

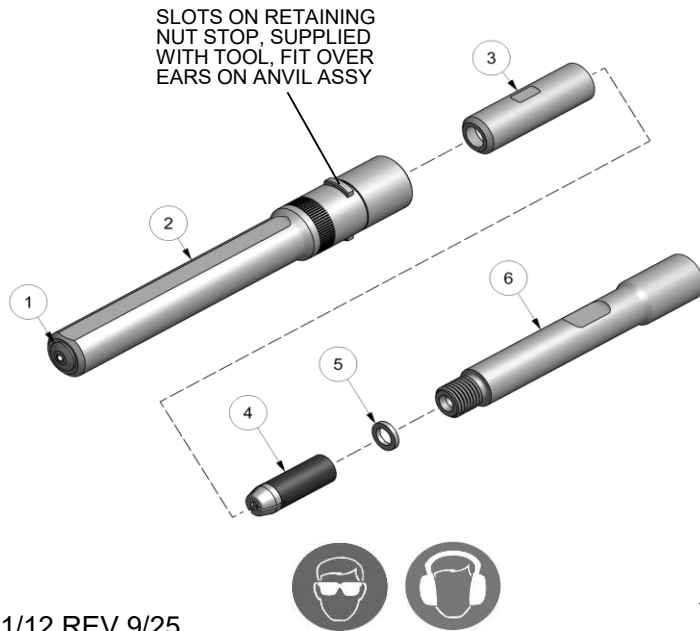

1/12 REV 9/25

**Anvil Assembly consists of #1 and 35208 retainer.

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fastener:	Recommended Tool:
Non Self-Releasing *1/8" Ø		"A" CODE NAS1398A, NAS1399A NAS1738A, NAS1739A	GB751
			Alternate Tools: GB722 & GB2480(A)
Ref. No.	Qty.	Description	4A-752C-45
1	1	Anvil-Driver	10488
2	1	Anvil & Holder Assembly (Inc. #1)	17763
3	1	Collet	20727
4	1	Super-Grip Jaw Assembly	30425-S
5	1	Spacer	40465
6	1	Extension-Collet	70551

VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION.