



NOSE ASSEMBLY DATA SHEET

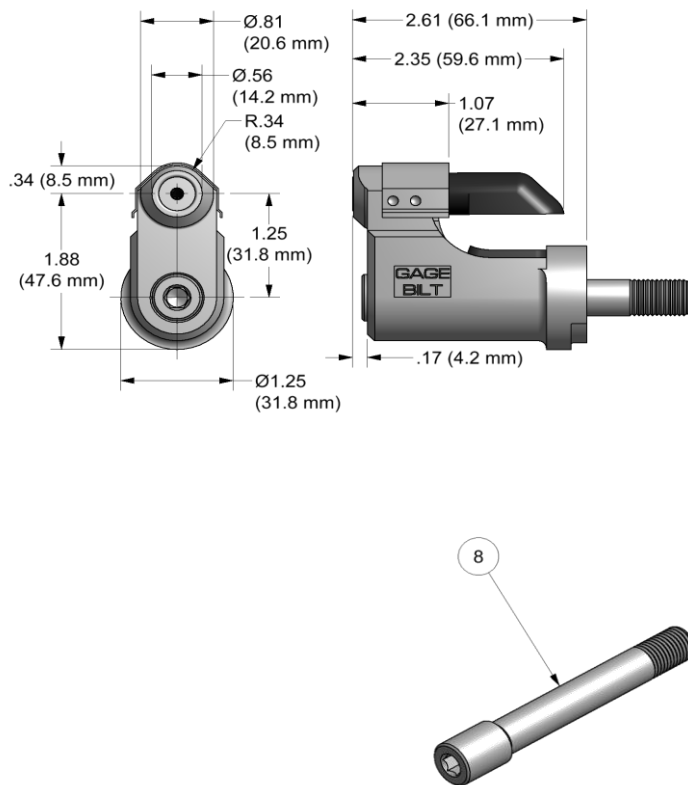

CAUTION:

Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY. Cap (9) use for closed access applications only or when clearance is an issue!

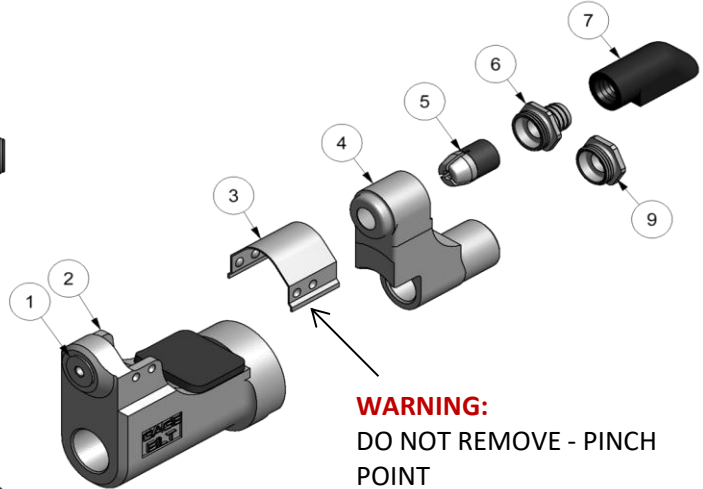

ATTACHING NOSE ASSEMBLY TO TOOL:

1. Cycle tool to ensure piston is full forward.
2. Disconnect tool from power source.
3. Remove screw and stop from tool.
4. Apply Vibra-TITE® part no. 405124 to threads on drawbar.
5. With nose assembly complete assembled, hold collet full forward in anvil and thread drawbar into piston.
6. In approximately 2-3 turns, the anvil assy threads will also engage onto tool, continue to thread drawbar and anvil completely on tool.
7. Back-off assy, no more than 1/2 turn, to position notch on anvil allowing screw and stop to be reassembled onto tool.



*Use Adapter No. 751206-1 with 722142 stroke limiter.
Optional use 731206 (No stroke limiter needed).

**Use Adapter No. 353206-1 & 745160 stroke limiter.

3/23

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fasteners:	Recommended Tool:
Non Self-Releasing 3/16" Ø		EN6122 & UAB130-EU EN6127 & UAB6127-EU EN6128 & UAB100-EU EN6129 & UABP-EU	GB206-500(A)
			Alternate Tools: *GB722 & **GB745
Ref. No.	Qty.	Description	UAB06-206H-27OS
1	1	Nose Tip	16026
2	1	Anvil & Holder Assembly (Inc. #1)	12222
3	1	Guard	60426
4	1	Collet	20722
5	1	Super-Grip Jaw Assembly	30656-S9
6	1	Barbed Retainer	70569
7	1	Deflector	61107
8	1	Drawbar	71141
9	1	Cap	70571